Trim type:
Shadow gap

Fire rating:
NFR

selo® Experience simplicity.

Enigma

Pocket sliding door systems

1 2

NFR S Installation instructions

Thank you for choosing Enigma

To ensure the installation process is simple and efficient we recommended you read this guide in full before you begin.

Tools required

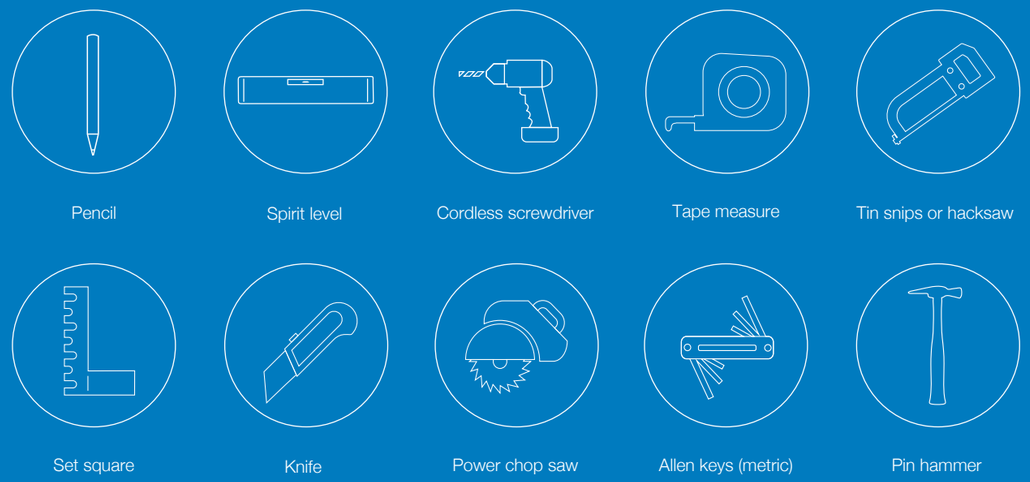

Getting started

Before you start installation ensure you have read and understood the instructions.

Delivery

The Enigma pocket door system will be delivered in two boxes. One is the pocket frame and the other is the trim surround.

If a door leaf has been ordered this will come separately.

Scan to watch the installation video.
www.selo-uk.com/video

Enigma NFR Shadow gap frame kit

Trim components

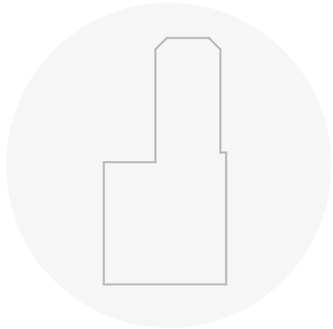

1 Head trim
(Single door x1, Double door x2)

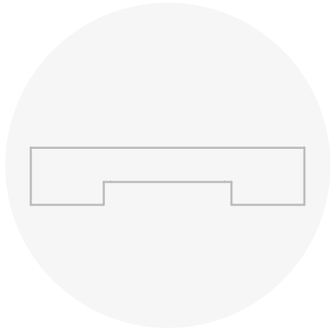

2 Strike trim
(Single door x1, Double door n/a)

3 Leading edge trim
(Single door x2, Double door x4)

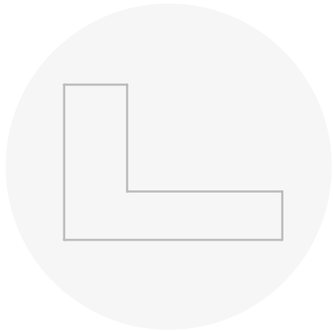

4 Shadow gap cover trim
(Single door x5, Double door x6)

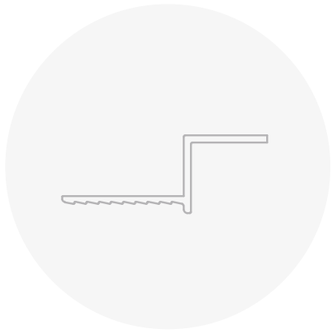

5 Shadow gap plaster bead

6 Strike jamb seals

Trim fixings

1 **Type-5** 25mm self drilling screws

2 **Type-7** 35mm self drilling drywall screws

3 **Type-8** 42mm self drilling drywall screws

4 **Type-9** 50mm gold screws

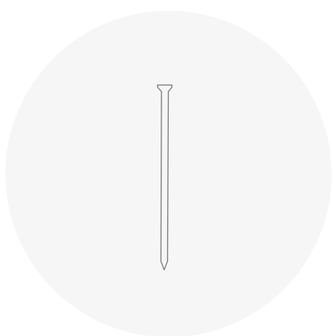

5 30mm panel pins

7 Brush strip

A) Door leaf installation

With the FD30 concealed system the door leaf needs to be hung before the frame is fitted.

1 Fit head brackets

Fit the head brackets 150mm from edge of the door leaf to centre of the bracket. Use the screws provided.

IMPORTANT

1. If you are using the simultaneous opening mechanism then it needs to be installed now. If using a simultaneous opening the door leaf height needs to be reduced by an extra 5mm.

2. If you are using a touch latch mechanism then fit plasterboard to one side of the wall only until the touch latch is fitted and working correctly.

2 Fit the guide channel

Tap the black nylon door guide channel into the groove in the bottom of the door.

IMPORTANT

If using a self closer then please refer to the self closer installation instructions.

3 Assemble gear

Insert trolley's into track and adjust the bolts so it sits 20-25mm beneath the track.

4 Hang the door

Hang the rear door bracket onto the trolley bolt.

4.1

4.2

4.1 The bracket fits onto the bolt as shown

4.2 Feed the rest of the door at least halfway into the pocket and hang the front bracket onto the trolley bolt

4.3 Ensure the door is plumb and level. Bolts in the roller trolley can be used for adjustment

5 Fit the front the door stop

Slide the white nylon door stop into the track and fix into place by tightening the grub screw.

This can be finally adjusted once the trims are installed.

IMPORTANT

If using a soft closer follow the specific soft closer instructions.

6 Fit track end block

The track end block fits at the end of the track for a single door and in the middle of the two tracks for a double door.

First drill a pilot hole and fix the block into place using the type 10 screw.

B) Trim installation

Now the door leaf is hung you are ready to install the concealed frame.

1 Install leading edge trim

Cut leading edge trim to the height of the opening and fix into the aluminium profile flange using Type-5 screws.

2 Install strike trim

Cut the strike trim to the opening height (underside of head channel to floor) +10mm. Notch the top of the trim so it fits centrally in the head channel.

IMPORTANT

When installing double doors the strike jamb will not be used.

3 Install head trim

Cut the head trim to the distance between the two timber side jambs. Slot into place in the head.

4 2nd layer of plasterboard

Clad the pocket with a second layer of plasterboard over the timber frame. Using Type-7 screws.

4a 2nd layer of plasterboard

The second layer of plasterboard needs to stop short of the timber frame edge by 40mm. This allows for the shadow gap and trims.

5 Fit the shadow gap trim

Cut the timber shadow gap trim to height and width. It will need to be mitered at 45 degrees in the corners.

Fix the trim into place using pins.

6 Fit the shadow gap plaster bead

Cut the shadow gap plaster bead to length mitering it at the corners. Fix into place using Type-8 screws.

7 Fix remote stop into place

Adjust the remote stop so it holds the door flush with the pocket end and fix into place with the self drilling screw provided.

IMPORTANT

Once you have done this make sure you clear away any swarf that has dropped down from fixing the screw onto the track. If left there the swarf will stick to the trolley wheels and caused the wheels to ‘rumble’ as it opens and closes.

8 Final adjustment to front door stop

Make final adjustment to the plastic to stop so that it stops and holds the door in its correct position.

9 Plaster/tape joint and paint

Now the wall can be plastered or tape and jointed up to the plasterboard shadow gap trim.

Once the plaster/jointing compound has dried the walls and trims can be decorated.

IMPORTANT

Before plastering in the trims, using a laser level ensure that they are straight and true.

10 Fit strike jamb seals

The strike jamb seals are fitted to the corners of the strike jamb.

11 Fit brush seals

Cut the brush strips to length and fit into the groove in the leading edge timber trim.

Congratulations!

You have now completed installation of your Enigma Pocket sliding door system.

Enigma Contact

Find out more

For help and advice with your installation contact our experienced team.

tel 020 3880 0339 / **email** sales@selo-uk.com

Visit our website, loaded with the content and features you want to see.

www.selo-uk.com

© 2015 by Selo. All rights reserved.

No part of this publication may be reproduced in any material form (including photocopying or storing it in any medium by electronic means and whether or not transiently, or incidentally to some other use of this publication) without the written permission of the copyright owner. Application for the copyright owner's permission to reproduce any part of this publication should be addressed to Selo.

Where colour and finish samples are shown within this document limitations in the reprographics process mean absolute colour accuracy cannot be guaranteed. Where colour matching is critical, a sample of the material can be provided on request.

Selo reserves the right to alter specification and designs without prior notice.

Revised - September 2018

For **help and advice** with any Selo product, call the support team on:

020 3880 0339

selo®

call 020 3880 0339
email sales@selo-uk.com
www.selo-uk.com

Selo
K2 Kents Hill Business Park Timbold Drive
Milton Keynes MK7 6TT

Connect
@selosimplicity